
## T2 Terminator Tooling



# **Application Tooling Specification Sheet**

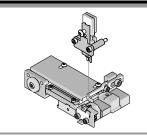

Order No. 63911-2200

## **FEATURES**

- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tablength
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements


### **SCOPE**


Products: 3.96 (.156") Wire-to-Wire and Wire-to-Board Crimp Terminal, 16-18 AWG.

Terminal Series No.	Terminal Order No.	Wire Size and Type			Insulation	Strip Length			
				IPC/WHMA-A620 (1)				Terminal (2)	
		AWG	Type	mm	ln.	mm	ln.	mm	ln.
50597	50597-8000	16-18	UL 1007	2.00-2.60	.078102	2.00-2.60	.078102	2.70-3.30	.106130
50599	50599-8000	16-18	UL 1007	2.00-2.60	.078102	2.00-2.60	.078102	2.70-3.30	.106130

<sup>(1)</sup> To achieve optimum IPC-A620 Class 2 insulation crimps, use this insulation OD range

## **DEFINITION OF TERMS**

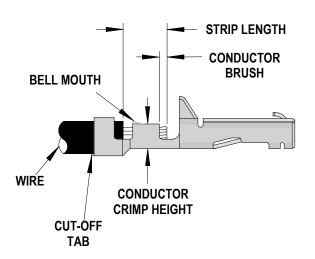

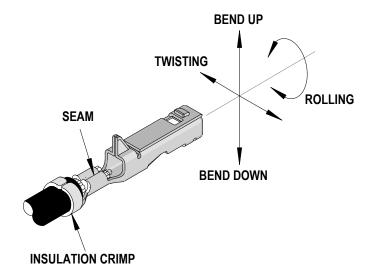

Doc No: ATS-639112200 Release Date: 09-27-11 **UNCONTROLLED COPY** Page 1 of 6

Revision: A Revision Date: 09-27-11

<sup>(2)</sup> Overall insulation OD specification for terminal

## **CRIMP SPECIFICATION**

Terminal Series No.	Bell n	nouth	Cut-off Tak	Maximum (	Conductor Brush		
Terminal Series No.	mm	ln.	mm	ln.	mm	ln.	
50597	0.10-0.60	.004024	0.25	.010	0.00-1.00	.000039	
50599	0.10-0.60	.004024	0.25	.010	0.00-1.00	.000039	

	Dand up [	Twict	Roll	Punch Width mm (Ref)				Seam	
Terminal Series No.	Bend up E	i wist	Koli	Conductor		Insulation			
	Degree		Degree		mm	ln	mm	ln	Seam shall not be open
50597	4	3	3	8	2.00	.078	2.60	.102	and no wire allowed out
50599	4	3	3	8	2.00	.078	2.60	.102	of the crimping area

After crimping, the crimp profiles should measure the following:

Terminal Series No.	Wire Size		Conductor C	Crimp Height		rimp Height ef)	Pull Force Minimum	
	AWG	mm <sup>2</sup>	mm	ln.	mm	ln.	N	Lb.
50597	16 AWG	1.30	1.21-1.31	.047052	3.60	.142	127.40	28.64
50597	18 AWG	0.80	1.16-1.26	.045050	3.40	.134	88.20	19.83
50500	16 AWG	1.30	1.21-1.31	.047052	3.60	.142	127.40	28.64
50599	18 AWG	0.80	1.16-1.26	.045050	3.40	.134	88.20	19.83

## Tool Qualification Notes:

1. Pull Force should be measured with no influence from the insulation crimp.

2. The above specifications are guidelines to an optimum crimp.


**UNCONTROLLED COPY** Doc No: ATS-639112200 Page 2 of 6 Release Date: 09-27-11 Revision: A

Revision Date: 09-27-11

## **PARTS LIST**

Terminator 63911-2200										
Item	Order No	Quantity								
ItemOrder NoEngineering No.DescriptionQuantityPerishable Tooling										
	63911-2270	63911-2270	Tool Kit (All "Y" Items)	REF						
1	63444-2005	63444-2005	Conductor Punch	1 Y						
2	63445-2019	63445-2019	Conductor Anvil	1 Y						
3	63454-0131	63454-0131	Insulation Punch	1 Y						
4	63445-2632	63445-2632	Insulation Anvil	1 Y						
5	63443-0005	63443-0005	Cut-Off Plunger	1 Y						
6	63443-0012	63443-0012	Front Plunger Retainer	1 Y						
	Other Components									
7	11-17-0022	1739-21	Hold Down Spring	1						
8	11-18-4083	60707-8	Feed Guide	1						
9	11-24-1067	4996-4	Cut-off Plunger Spring	1						
10	63443-0009	63443-0009	Front Scrape Chute	1						
11	63443-0024	63443-0024	Key	1						
12	63443-0085	63443-0085	Wire Stop L-Bracket	1						
13	63443-0090	63443-0090	Wire Stop	1						
14	63443-0093	63443-0093	Shank	1						
15	63443-1719	63443-1719	Height Spacer	1						
16	63443-2216	63443-2216	Coarse Spacer (16.00mm)	1						
17	63443-2301	63443-2301	Fine Spacer (3.05mm)	1						
18	63443-2802	63443-2802	Front Plunger Striker	1						
19	63443-2910	63443-2910	Wire Hold Down Plunger	1						
20	63443-6007	63443-6007	Rear Cover	1						
21	63443-7201	63443-7201	Spring Cover	1						
22	63600-1057	63600-1057	Compression Spring	1						
23	63600-2972	63600-2972	Collar	2						
24	63901-9802	63901-9802	Terminal Hold Down	1						
		Fra	me							
25	63800-8500	63800-8500	T2 Terminator	1						
		Hard	ware							
26	N/A	N/A	M3 by 6 Long SHCS	2**						
27	N/A	N/A	M3 by 6 Long FHCS	1**						
28	N/A	N/A	M3 by 8 Long SHCS	1**						
29	N/A	N/A	M4 by 6 Long SHCS	2**						
30	N/A	N/A	M4 by 12 Long BHCS	2**						
31	N/A	N/A	M4 by 14 Long SHCS	2**						
32	N/A	N/A	M4 by 30 Long SHCS	2**						
33	N/A	N/A	M4 by 50 Long SHCS	2**						
34	N/A	N/A	M5 by 12 Long SHCS	1**						
35	N/A	N/A	#10-32 by 3/8" Long BHCS	1**						
** Available from an industrial supply company such as MSC (1-800-645-7270).										

Doc No: ATS-639112200 Release Date: 09-27-11 **UNCONTROLLED COPY** Page 3 of 6 Revision: A Revision Date: 09-27-11

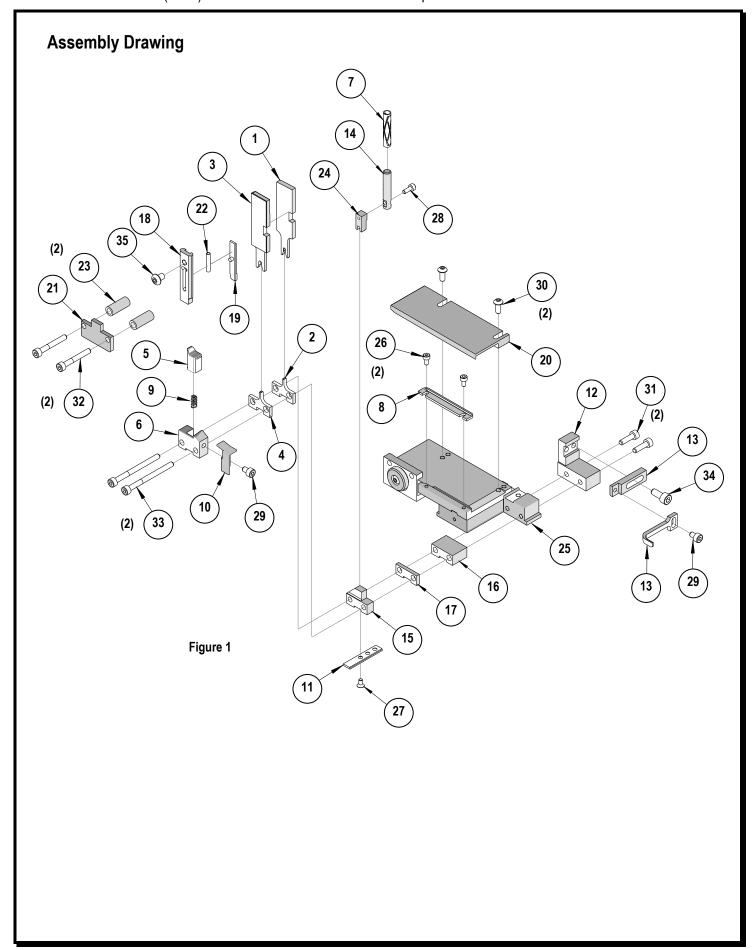


Doc No: ATS-639112200 Revision: A Release Date: 09-27-11 Revision Date: 09-27-11

#### **NOTES**

## Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

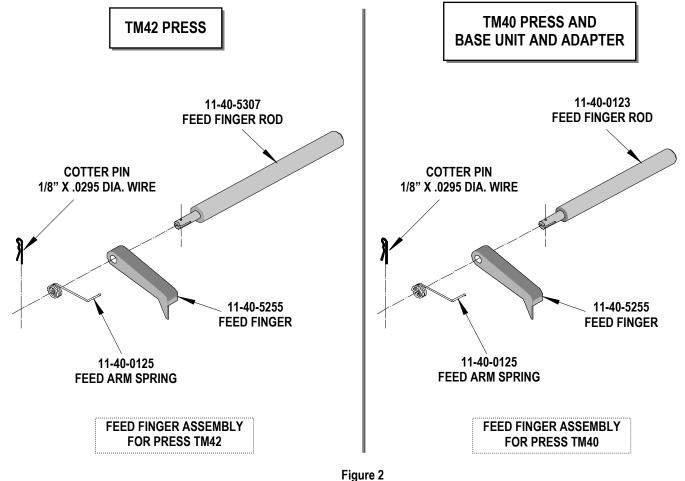

**UNCONTROLLED COPY** Doc No: ATS-639112200 Release Date: 09-27-11 Page 5 of 6 Revision Date: 09-27-11

Revision: A

## **NOTES**

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

**CAUTION**: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, terminator s and tooling.

http://www.molex.com

Doc No: ATS-639112200 **UNCONTROLLED COPY** Release Date: 09-27-11 Page 6 of 6 Revision Date: 09-27-11

Revision: A